


Step 4

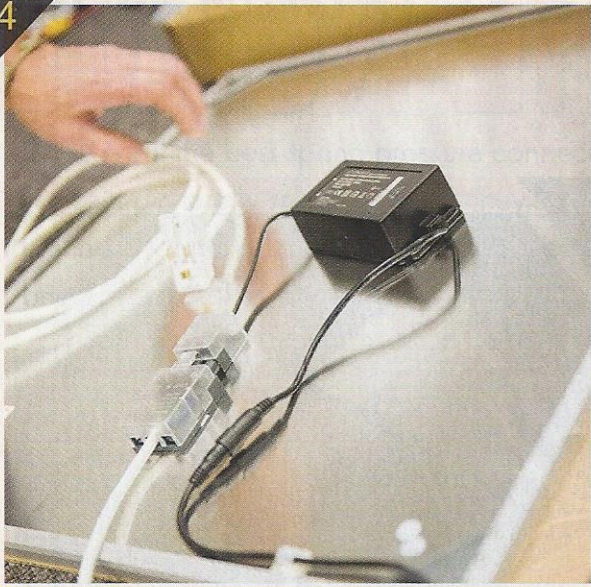

The installation of the driver is simple on the flat panel, thanks to its plug and play function. One thing to remember though is to put the driver in the middle of the fitting when installing it into the suspended ceiling, so that it sits away from the LEDs (which emit some heat when in operation).

Step 5







When installing the Kurve panel into the suspended ceiling however, it is simply a matter of connecting it to the inline socket, no care needs to be taken with the driver as this is integral to fitting already.

For more information circle readerlink 185

*Please note that the depth of the ceiling void needs to be checked in advance, to gauge whether it is best to use a shallower Kosnic LED flat panel, or the slightly deeper Kosnic Kurve LED panel.

THE ADVENTURES OF BIG WIPE AND POWER SPRAY

GRIMEFIGHTING SUPERHEROES TO THE TRADE!

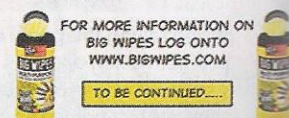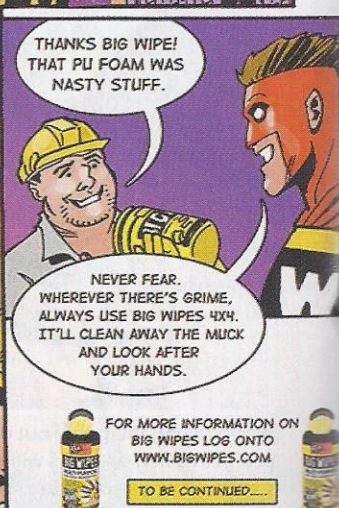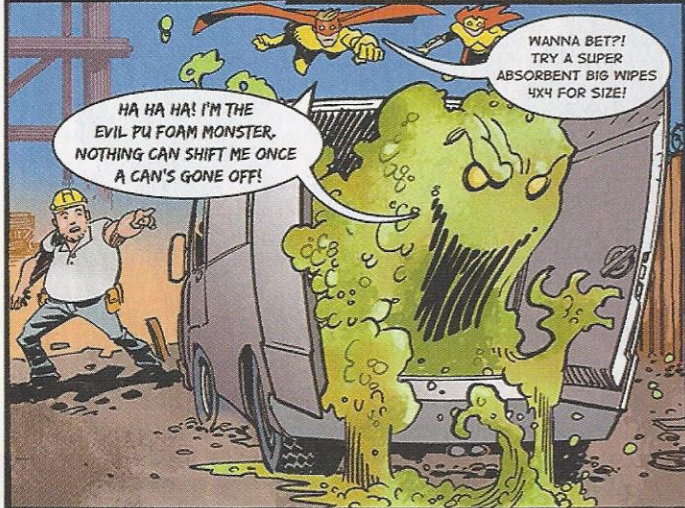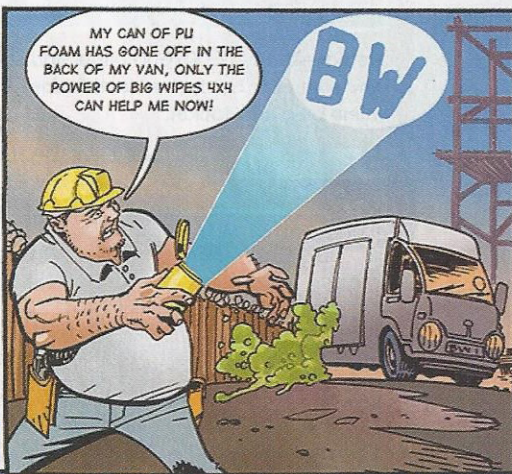

FOR MORE INFORMATION ON BIG WIPES LOG ONTO WWW.BIGWIPES.COM

TO BE CONTINUED.....

FREE TO THE TRADE

Professional ELECTRICIAN

AND INSTALLER

THE BUSINESS MAGAZINE FOR THE ELECTRICAL TRADE

MAY 2015

AHEAD OF THE KURVE

STEP-BY-STEP GUIDE
TO FIT THE NEW KURVE
PANEL FROM KOSNIC

STAND OUT IN THE CROWD

ARE YOU MARKETING YOUR BUSINESS EFFECTIVELY?

TESTED

CPN CUDIS LUMO
MILWAUKEE MT8 MULTI-TOOL
WERA ZYKLOP RATCHET